

Iwatsu 12/24 Button IP Phone

List key
This key is used to list all of the features available and associated codes

Menu Key
This key is used to program and customize the features on your phone

Built-In Handsfree Speakerphone

Fixed Features:
Speakerphone
Transfer
Feature Access
Speaker Volume



LCD with Soft Keys, Including "Menu" and "List" Scroll keys

"Customized" Programmable Feature/Line Keys (See below)

Mutes Microphone or the Handset

Adjusts Ringer Volume

Adjusts Handset Volume


Hold or DND

Following are the Primary Feature/Line Keys Programmed on your Phone (See Quick Reference Guide for Detailed Operation)

- LOOP** These keys are used to place and receive calls on outside lines.
- ICM** This key is used for internal calls to other extensions.
- PARK** Used to hold a call for someone else, or to retrieve a call "Parked" on another extension.
- ADD** Used to "Conference" other parties into your call.
- PICK-UP** Used to answer, or "Pick-Up" another ringing phone that is in your group.
- SPEED** Used to access your pre-programmed "Speed Dial" numbers.
- REDIAL** Used to "Redial" the last outside phone number you called.
- XFER VM** This key will allow you to "transfer" a call directly to a "Voice Mailbox" to leave a message.
- V.MAIL** This key is your access to "Voice Mailbox" and will light when you have a message.

Voice Mail (Getting Started and Accessing your Mailbox) (Press your V.MAIL key to begin)

You will need to access your Voice Mailbox and customize it with your personal greetings and password, before you will be able to use it. This process is easy and takes only a few minutes. You should only attempt to do it using the handset and when you are ready to record your greetings.

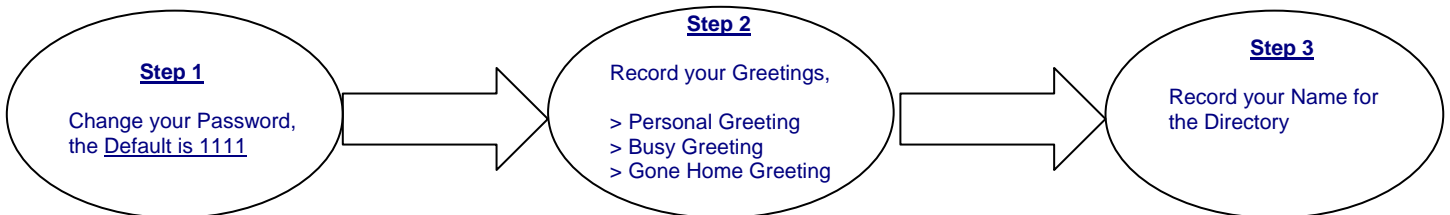

(See TOL User Guide for Operation)

You can access your Voice Mailbox with the **V.MAIL** key on your telephone, or from outside by dialing the access number for the "backdoor to the Voice Mail and logging in, as follows:

Access Number: _____ **Login:** Press the '#' key