

Setting the clock for the Iwatsu System can be done as follows:

## Attendant Position - Basic Features



### \* From the Attendant Position \*

#### Clock Set/Adjustment

Allows you to change the time for the system clock.

#### *Operation*

To change the time:

- ☞ Press the Speaker button **SPKR**
- ☞ Wait for the dial tone
- ☞ Press the Feature button **FEAT** then dial **64**
- ☞ Dial the time in military time **H H : M M**
- ☞ Wait for a confirmation tone
- ☞ Press the Speaker button **SPKR**

To adjust seconds to zero:

- ☞ Press the Speaker button **SPKR**
- ☞ Wait for the dial tone
- ☞ Press the Feature button **FEAT** then dial **64**
- ☞ Dial **0** to adjust seconds to zero
- ☞ Dial **0** again to start the clock with zero seconds
- ☞ Wait for a confirmation tone
- ☞ Press the Speaker button **SPKR**

If the seconds shown on the DSS are less than 30, the minutes digit will remain the same. If the seconds shown on the DSS are greater than 30, the minutes digit will advance one digit.